



## Product Accessory Instructions


# RollMaster 1000 Left Side Kit

10004461

**Kit Includes:**

- Left Side Mount Bracket (10003865)
- Left Side Mandrel Tube (10003866)
- (2) 5/16-18 x ¾" Bolts, (4) 5/16" Flat Washers, & (2) 5/16-18 Lock Nuts

1. Unbolt and set aside the Roller Carrier Assembly (#1). Keep the hardware for installation on the Left Side Mount Bracket (#2).
2. Install the Left Side Mount Bracket (#2) with L-Bend at the top and facing forward, with the included bolts, washers and nuts.  
**Note:** Line up the top edge of the bracket with top front edge of the RollMaster Chassis (#3) and then tighten the nuts.
3. Install the Roller Carrier Assembly on the left end of the bracket with the hardware saved from Step 1.
4. Use the included Left Side Mandrel Tube (#4) with this kit.  
**Note:** The Left Side Mandrel Tube will pass under the bracket to connect to the hose.

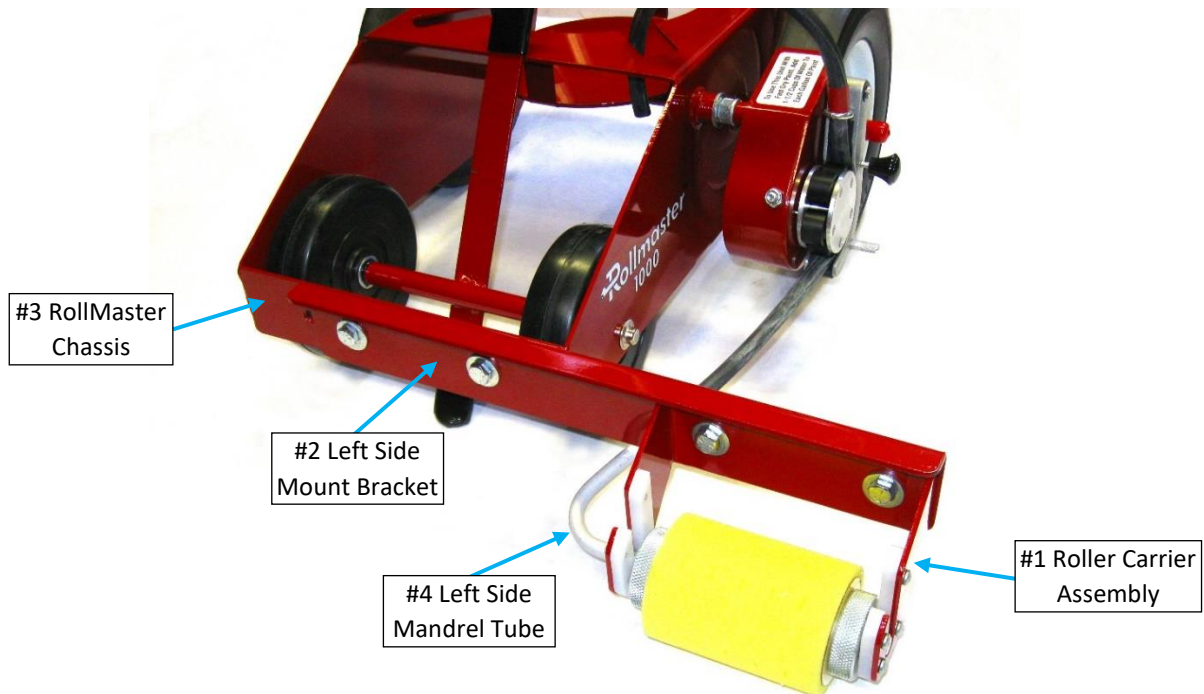

**Proudly Made in the USA**  
**Newstripe.com • 303-364-7786**